




KN95 Face Mask

Disposable


Product Details

Product name:	KN95 Protetive Face Mask
Product type:	FFP2, Single use, non-medical use
Size:	10.5*15.5cm
Inner & Outer layer:	Non-woven fabric, Hot air cotton
Filter:	Melt blown cloth
Colour:	White
Country of origin:	China
Efficiency (BFE) :	≥ 95%

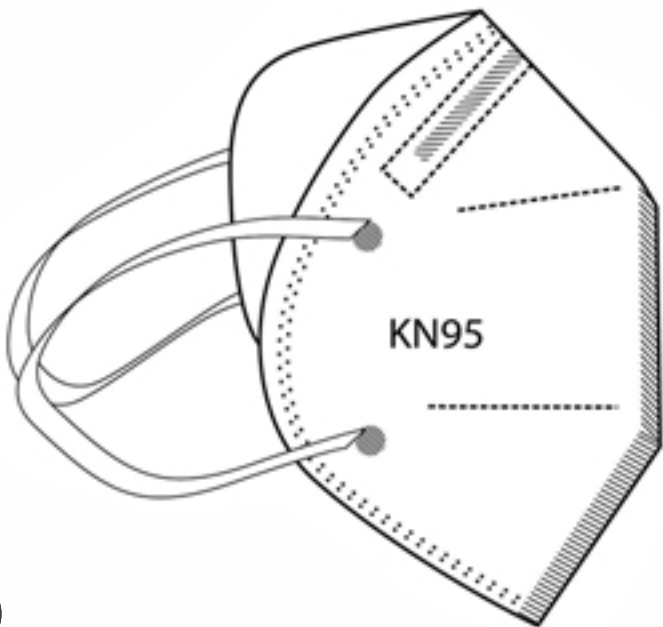

Mask performance (according to GB2626-2006 standard)
Bacterial filtration

Instructions

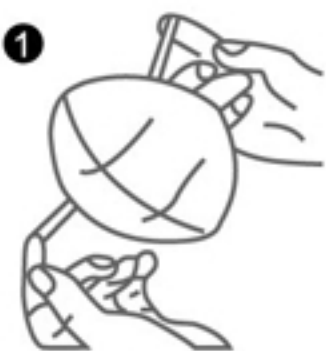

Face the face mask without nose clip, two hands hold on to each two ties, position the nose clip above the mask.



Pull the elastic band behind your ear,adjust mask and elastic band to feel comfortable.



press with both fingers from the middle to both sides, according to the shape of the bridge of the nose plastic, so that the nose clip fits the bridge of



Cover the mask with your hands and exhale, if any gas leaks from the edge, adjust again until no leakage occurs.

Features

- Disposable Face Masks
- Anti-pollution, Anti-dust
- Eary Air-flow
- Thickened Material

Instruction and scope of application

Mainly used for filtering particles in air pollution environ-ment in daily life, single-use only. This product can't be used in the isolation ward, observation ward, operating room, and other areas of the hospital environment.



Attentions in Use and Storage

- 1. Confirm the mask package is intact.
- 2. Timely replace the mask, not recommended to use it for a long time.
- 3. Stop using this product if you feel an uncomfortable or adverse reaction.
- 4. Store in dry and ventilated conditions. Keep the mask in its original shape.
- 5. Period of valid for 2years under specified storage conditions.

Logistic Information



Specifications
outer case

Size	Gross weight	QTY
62.5*26*58cm	9.2kg	1000pcs

